

Installing circlip in 4958 4-Point clamp set



1. Place circlip in wide groove.



2. Place ejector with circlip in body. Use pick or small flat blade screw driver to guide circlip into groove while applying light down pressure on ejector.



3. Ejector and circlip properly seated.



4. Press O-ring 1 into place.